



Посібник користувача - Energoeffektivitėtv / Vadovas - Energijos vartojimo efektyvumo / Manwal ghall-Utent - Effiċjenza fl-Energija / Kėzi - Energhiatėtėkonyasėg / Pėruċka - Energetickė uċinnost' / Prėruċka - Energetickė uċinnost' / Manual - Eficientė Energeticė / Ręczny - Efektywność energetyczna / Priručnik - Energetska efikasnost / Navodilo - Energetska uċinkovitost / Εϋημερίδιο - Ενεργειακή Αποδοτικότητα / Manuel - Energi Verimiligi / Наръчник - Энергията ефективност / Упутство - Энергетска ефикасност / Lámhleabhar Úsáideoir - Éifeachtúlacht Fuinnimh

Table with columns PF (FABER), M (330.0597.525), AEchood (37.4), EEC (A), FDEhood (29.2), FDEC (A), LEhood (50), LEC (A), GFEhood (65,1), GFEC (D), Qmin (240), Qmax (460), Qboost (570), SPEmin (53), SPEmax (69), SPEboost (73), PO (0,49), Ps (N/A), PI (0,9), EEIhood (48,9), QBep (285,0), PBep (402), Qmax (570,0), Wbep (109,0), WL (2,2), Emiddle (110), Lwa (69) in kWh/a, lux/Wat, and Watt units.

Main specification table with columns UA, LT, MT, CZ, SK, RO, PL, HR, SL, GR, TR, BG, SR, GA. Each column contains technical details and energy efficiency data for the corresponding language. Includes rows for PF, S, M, AEchood, EEC, FDEhood, FDEC, LEhood, LEC, GFEhood, GFEC, Qmin, Qmax, Qboost, SPEmin, SPEmax, SPEboost, PO, Ps, PI, F, QBep, PBep, Qmax, Wbep, WL, Emiddle, Lwa, PORA DI INTERNO, and PORA DI ESTERNO.

Additional information including energy saving tips, maintenance instructions, and contact details. Sections include 'PORA DI INTERNO', 'PORA DI ESTERNO', 'SUGGERIMENTI GENERALI', and 'NORMATIVE'. Contains technical notes and safety warnings.